




Install Your Midway™ Railing from Gilpin

Tools you will probably need:

☐ Level ☐ Hacksaw ☐ Tape Measure ☐ Drill/driver w/bits ☐ String or chalk line


❖ Determine location of newel posts.

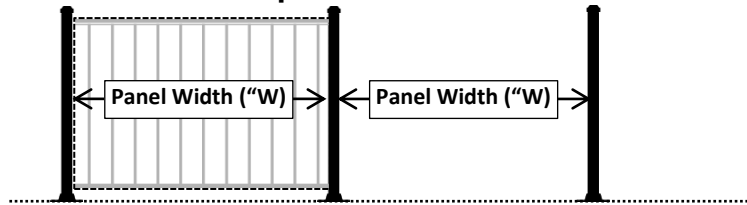


- Locate edge of flanges at least 2-1/2" from edges of platform.
- Mounting holes in flanged must be drilled to accommodate method of securing to floor.
- Posts must be plumb. Shim if necessary with weather resistant shim materials.

❖ **If using Installation Spindles:**

- Measure up 36" from platform on newel post.
- Measure down 1-1/8" from 36" mark
- Center Installation Spindle on post.
- Fasten Installation Spindle with top at measured mark with included screws.

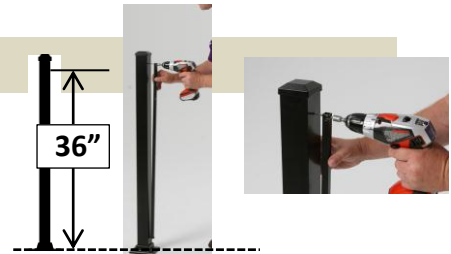


- ❖ Slide rail panel down over Installation Spindles beginning at bottom rail so top rail rests on Installation Spindle.
- ❖ Secure rail to Installation Spindle with supplied screws on both sides of top and bottom rails.

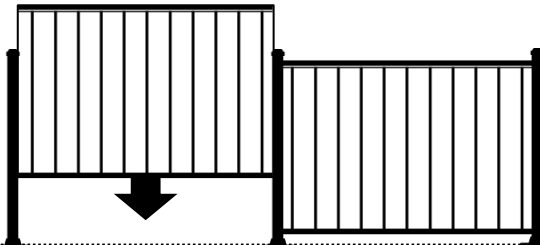

❖ **If using Swivel Fitting[s] (accommodates both vertical and horizontal angles):**

- ❖ Install according to instructions included with Swivel Fitting set.

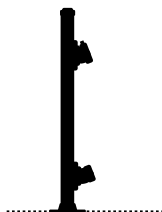

- ❖ Insure connections are tight.
- ❖ Touch up scratches with Gilpin Touch Up Paint.